eureka!®
Invented for the way you clean™

8860-8899 Series

QUICK START GUIDE

Thank you for purchasing your new Eureka vacuum!

Before returning, call Eureka Customer Service

HELPLINE

1-800-282-2886

8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

www.eureka.com

STEP 1 What's in the carton

Vacuum body & hose

Important safe guards

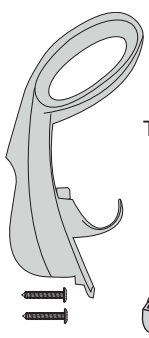
Handle & 2 screws

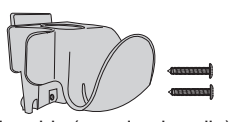
Tool caddy (carrying handle) & 2 screws


Power Paw®


Dusting brush


Crevice tool & extension wand

Self-cleaning duster

SPECIAL FEATURE
Available on some models

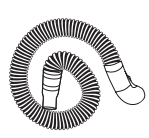
Stair hose

STEP 2 Easy assembly

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.
Moving parts. Make sure power switch is in OFF (O) position before plugging in power cord. Assemble the vacuum cleaner before using.

Use a Phillips screwdriver.

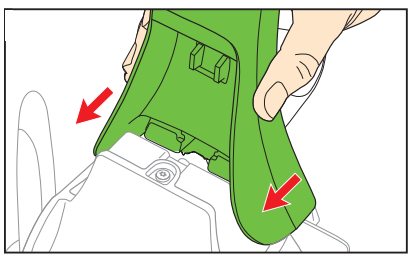
Slide on handle.

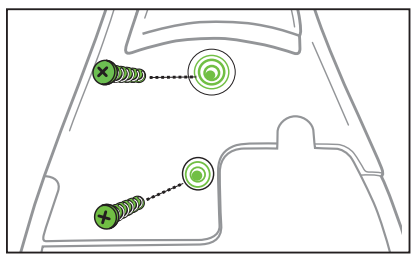
Tighten two screws.

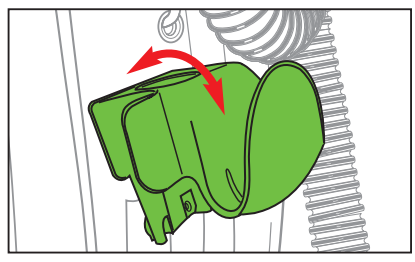
Insert tab & rotate into position.

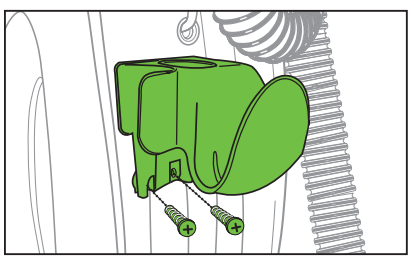
Tighten 2 screws.

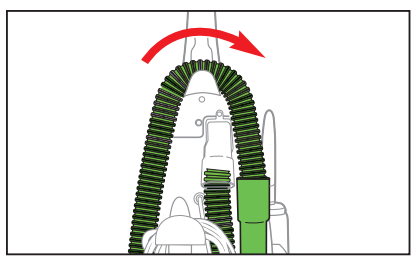
Place hose over hose hook.

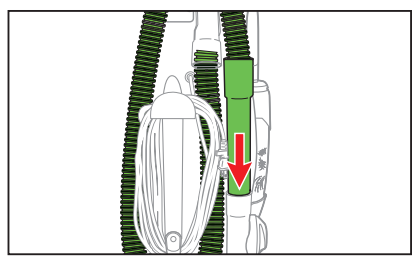
Secure hose into hose retainer.

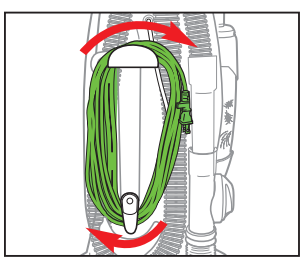
Wrap cord.

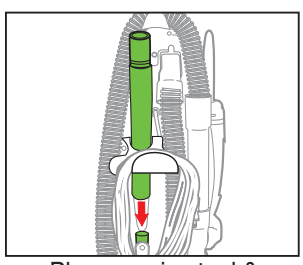
Place crevice tool & wand into tool caddy.

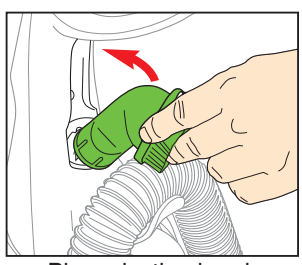
Place dusting brush behind handle.

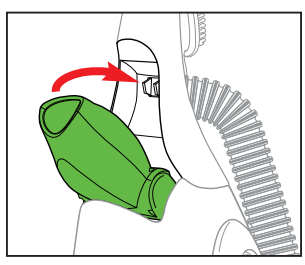
Snap Power Paw® onto handle.

STEP 3 Get ready to vacuum

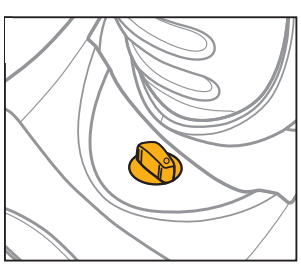
Adjust height for carpet. If vacuum is hard to push, raise carpet setting.

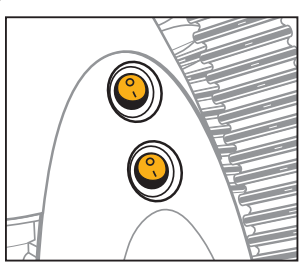
Plug into outlet and push switch (I) on. Push bottom switch for carpets.

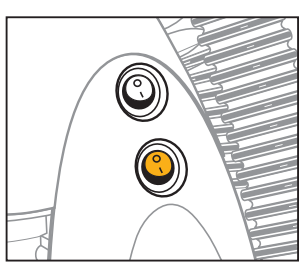
Push bottom switch off (O) for bare floor. Set height adjustment to bare floor.

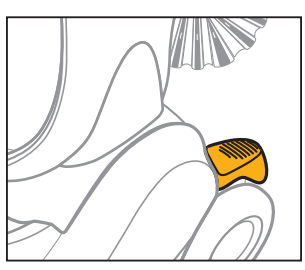
Step on handle release to lower handle into position.

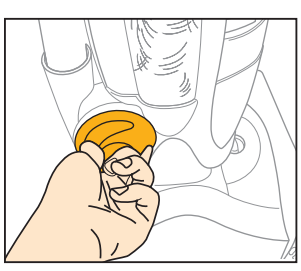
Push power switch on, turn knob to clean and activate static charge for 10 seconds.

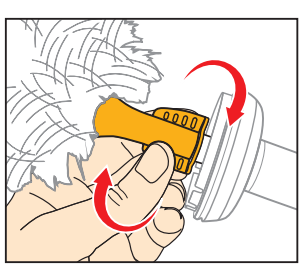
Turn to extend. Push firmly to collapse & turn to lock.

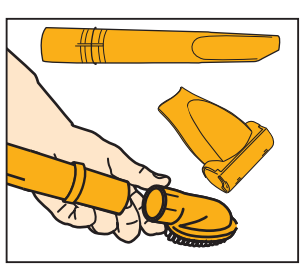
For accessories: Loosen end of wand, pull out and attach tool.

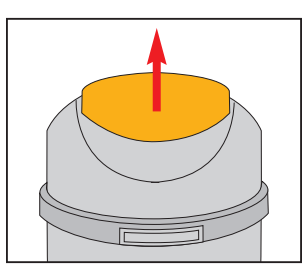
Lift latch to remove dust cup. Empty after each use.

PROBLEM SOLVING
Refer to Owner's Guide.

MAINTENANCE SCHEDULE
Refer to back of dust cup or Owner's Guide.